



# INSTALLATION INSTRUCTIONS FOR SENTINEL CONVEX MIRRORS

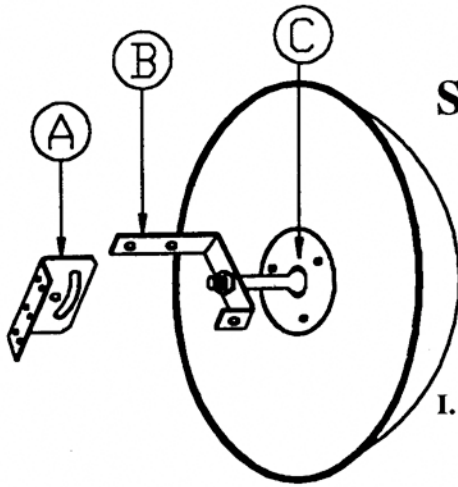

**WALL MOUNT**

**HARDWARE IS ENCLOSED IN CARTON:**  
 1-RIGHT ANGLE BASE PLATE (PART #A)  
 1-"J" BAR (PART #B)  
 1-"U" CHANNEL (PART #D)  
 1-BAG OF NUTS AND BOLTS

- I. The hardware furnished with each Sentinel Convex Mirror is flexible to meet your special needs. They can be attached to wall, ceiling, shelf or counter top. You will have to supply the screws, lag bolts or toggle bolts needed to fasten the base plate (A) to the ceiling or wall, as we do not know what type of material you are working with (plaster, wood or concrete).

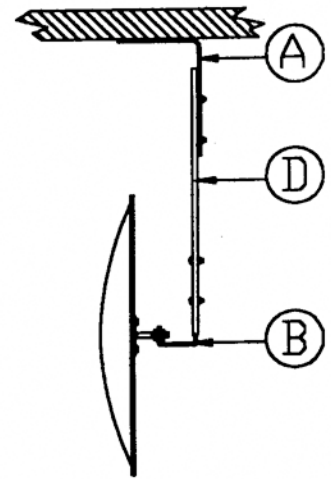

**CEILING MOUNT**

### TIPS ON HANGING SENTINEL MIRRORS

- ★ Do not hang the mirrors too high from the floor.  
(8-10 feet is recommended for the best extended view.)
- ★ Avoid hanging in path of heating or air-conditioning blowers.

## II. WALL OR POST MOUNT

- (1) For close wall mounting discard "U" channel (D).
- (2) Fasten base plate to wall or post. Attach "J" bar (B) to base plate with two of the bolts provided.
- (3) Attach mirror with ball swivel stem (C) to "J" bar (B) adjust to angle needed. Then lighten the three screws on ball swivel (C) to lock in place.

For extended wall mounting attach base plate (A) to wall. Cut U-channel (D) to desired length (the shorter you cut the U-channel, the more stable your hanging mirror will be). Attach stem of ball swivel to the "J" bar, with nut provided on the stem. Then with the two remaining bolts attach the "J" bar-mirror assembly to the "U" channel. Adjust mirror to angle needed, then tighten the three screws on ball swivel (C) to lock in place.

## III. CEILING MOUNT

- (1) Fasten base plate (A) to ceiling.
- (2) Attach "U" channel (D) to base plate (A) with 2 of the bolts provided.
- (3) Attach mirror to "J" bar (B). Adjust to proper height on "U" channel and attach with the remaining 2 bolts.
- (4) Adjust mirror to angle needed. Then tighten screws on ball swivel (D) to lock in place.

Mirrors can easily be hung from suspended ceilings. Cut a small hole in ceiling panel for "U" channel (D) to fit through. Mount baseplate (A) to piece of 2 by 4 which should span the two joists above suspended ceiling. Follow balance of above ceiling mount instructions.

## IV. OUTDOOR MIRROR INSTALLATIONS

If you have purchased a Sentinel outdoor convex mirror, follow either instructions II or III to start with. On the back of each outdoor model, there are threaded mounting bolts. Using angle iron, strapping or some sort of bracing (not included), attach these from the wall, ceiling or post to the threaded mounting bolts. This will help stabilize your mirror in high wind conditions.